


AD904E Assembly Guide

Before Assembling:


1. Please check the accessory list before assembly. Contact your local dealer if you find any parts missing.
2. Please read through the assembly guide.



3.5" Bracket

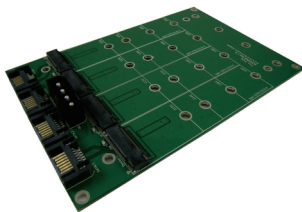


AD904E Adapter

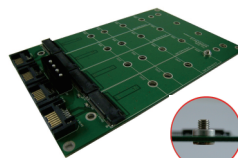


Picture 1



Picture 2

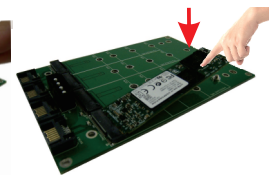

Picture 3

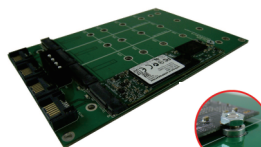

Picture 4



Picture 5



Picture 6

Accessory Package

(1) M3x5 Screw *1pc
P/N: 13MISW00005M11



[for M.2 NGFF SSD]

(2) M3 Nut *1pc
P/N: 13MINU00002M11



[for M.2 NGFF SSD]

(3) Copper Nut /H: 1.45mm *1pc
P/N: 13MICA00001M05



[for M.2 NGFF SSD]

Accessory package for 3.5" Bracket

(4) M3x8 Screw *4pcs
P/N: 13MISW00006M11



(5) M3x4mm Cooper nut *4pcs
P/N: 13MIPC00003M11



(6) M2 Nut *4pcs
P/N: 13/MINU00002M11



Step 1: Put copper nut on the same side of the NGFF connector;
and fix M3x5mm screw from bottom to top of the adapter (Picture 1).

Step 2: Insert M.2 NGFF SSD into M.2 67pin socket. (Picture 2)

Step 3: Press down M.2 NGFF SSD and aim to the copper nut hole. (Picture 3)

Step 4: Using M3 nuts to fix M.2 NGFF SSD on the adapter (Picture 4),
namely complete the installation.

-----Two mSATA SSD are using the same installation -----

Step 5: Put M3x8 screw from bottom side to top side of 3.5" frame and fix
with M3x4 copper nut (Picture 5).

Step 6: Fixed assembled mSATA+Adapter on 3.5" frame with M3 nut
(Picture 6).