


# AD909A Assembly Guide


## Before Assembling:

1. Please check the accessory list before assembly. Contact your local dealer if you find any parts missing.
2. Please read through the assembly guide.


## AD909A Adapter

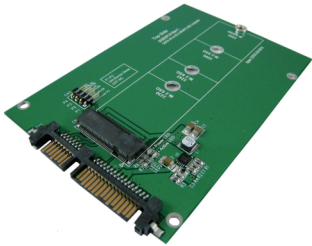


Top side

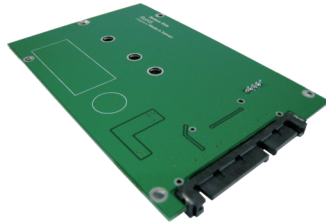

Bottom side

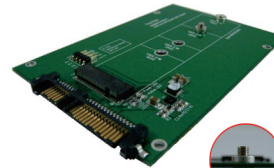

Step 1

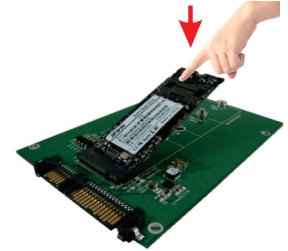

Step 2







Step 3



Step 4

## Accessory Package

(1)M3x5 Screw *1pc P/N: 13MISW00005M11		[for M.2 NGFF SSD]
(2)M3 Nut *1pc P/N: 13MINU00002M11		[for M.2 NGFF SSD]
(3)Copper Nut /H: 1.45mm *1pc P/N: 13MICA00001M05		[for M.2 NGFF SSD]
(4)Jumper *1pc P/N: 12MI0400002M24		[for Device Sleep]

Step 1: Put copper nut on the same side of the NGFF connector;  
and screw M3x5mm screw from bottom to top of the adapter.

Step 2: Insert M.2 NGFF SSD into M.2 67pin socket.  
Press down M.2 NGFF SSD and aim to the copper nut hole.

Step 3: Using M3 nuts to fix M.2 NGFF SSD on the adapter (Figure 4),  
namely complete the installation.

**If your M.2 NGFF SSD is 2280 form factor, pls ignore step 1.  
Use M3 x 3 Screw to fix M.2 NGFF SSD.**

Step 4: If you like to have Device Sleep mode function for M.2 SSD,  
please use spare jumper to short Pin-1 and Pin-2.