


AD911A Assembly Guide

Before Assembling:

1. Please check the accessory list before assembly. Contact your local dealer if you find any parts missing.
2. Please read through the assembly guide.

Accessory Package

(1)M3x3 Screw *1pc P/N: 13MISW00010M11		[for M.2 Adapter]
(2)M3x5 Screw *1pc P/N: 13MISW00005M11		[for M.2 NGFF SSD]
(3)M3 Nut *1pc P/N: 13MINU00002M11		[for M.2 NGFF SSD]
(4)Copper Nut /H: 1.45mm *1pc P/N: 13MICA00001M05		[for M.2 NGFF SSD]

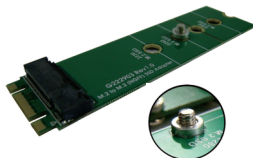

picture 1



picture 2



picture 3

Step 1: Put copper nut on the same side of the NGFF connector;
and fix M3x5mm screw from bottom to top of the adapter (picture 1).

Step 2: Insert M.2 NGFF SSD into M.2 67pin socket. Press down M.2 NGFF SSD and aim to the copper nut hole. (picture 2)

Step 3: Using M3 nuts to fix M.2 NGFF SSD on the adapter (picture 3), namely complete the installation.