

S2035E 安裝說明

M.2 (NGFF) SSD 雙埠轉 SATA 轉接卡


準備事項:

1. 首先檢查以下所列配件清單. 如有短少, 請聯繫當地經銷商.
2. 請閱讀安裝流程說明.

3.5" 支架



S2035x 轉接卡

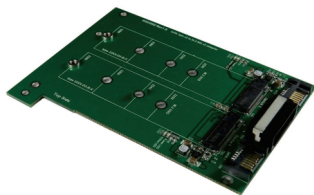


M.2 SSD 組裝套件

- | | | |
|-----------------------------------------------|-----------------------------------------------------------------------------------|----------------------|
| (1)M3x3 螺絲 *1pc
P/N: 13MISW00005M11 |  | [for M.2 (2280) SSD] |
| (2)M3 螺帽 *1pc
P/N: 13MINU00002M11 |  | [for M.2 NGFF SSD] |
| (3)H: 1.45mm/合金銅柱 *1pc
P/N: 13MICA00001M05 |  | [for M.2 NGFF SSD] |
| (4)M3x5 螺絲 *1pc
P/N: 13MISW00005M11 |  | [for M.2 NGFF SSD] |

3.5" 支架組裝套件

- | | |
|--------------------------------------------|-------------------------------------------------------------------------------------|
| (4)M3x8 螺絲 *4pcs
P/N: 13MISW00006M11 |  |
| (5)M3x4mm 合金銅柱*4pcs
P/N: 13MICP00003M11 |  |
| (6)M2 螺帽 *4pcs
P/N: 13/MINU00002M11 |  |

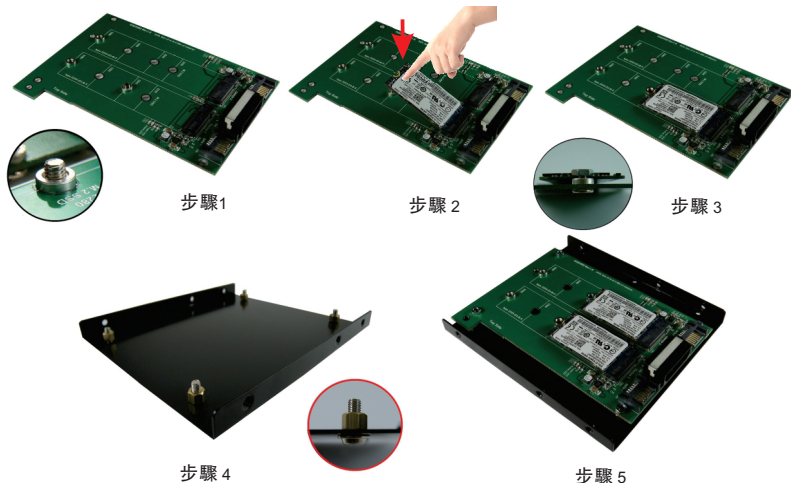

步驟 1:將合金銅柱放於轉接卡上適合您SSD的長度的固定孔,並使用M3x5螺絲由轉接卡底部往上鎖住轉接卡及銅柱.

步驟 2:將M.2 NGFF SSD 插入 67針 連接器中.按下M.2 NGFF SSD 使SSD與轉接卡呈現水準並與合金銅柱孔位對齊.

步驟 3:使用 M3螺帽固定M.2 NGFF SSD於轉接卡上.

若你的M.2 NGFF SSD 為 2280 規格大小, 請跳過以上步驟,並使用M3 x3螺絲固定M.2 NGFF SSD即可.

-----兩支M.2 SSD安裝方法相同-----

步驟4:將4個M3x5螺絲穿過3.5" 支架,並與M3x4銅柱結合(此時螺絲會高出銅柱).

步驟5:將[步驟4]已安裝好的轉接卡四個3.5" 固定孔對齊並擺放入3.5" 支架後,使用M3螺帽固定即完成S2035E安裝程式.